


**FEATURES:**

- Factory preset address for the locomotive is 03.
- The decoder supports NMRA-DCC data format as well as the MOTOROLA protocol, in DC analog mode with DC power packs (including PWM) and with AC analog (Märklin Transformers with high-voltage pulses for direction change).
- 14, 28 or 128 selectable speed steps for DCC systems.
- Load compensation function.
- 4 function outputs + 6 logic level
- Audio amplifier: 1 W, 8 Ohms.
- Find the full instruction manual at [http://www.zimo.at/web2010/documents/MS-Sound-Decoders\\_EN.pdf](http://www.zimo.at/web2010/documents/MS-Sound-Decoders_EN.pdf).


**DECODER PARAMETERS:**

The sound decoder controls several parameters (CVs). You can find a list of all CVs at [http://www.zimo.at/web2010/documents/cvliste\\_02\\_2021\\_EN.pdf](http://www.zimo.at/web2010/documents/cvliste_02_2021_EN.pdf).

Each CV can be configured independently using its respective command. The CVs changed in this specific sound project are shown at the end of this sheet.

**DCC Systems (ZIMO, Lenz, Intellibox, etc.):**

It is much easier to modify the parameters if you have a DCC compatible digital system. Please, read the corresponding chapter in your system manual (DCC decoders programming). The sound decoder supports any NMRA programming system.

**ANALOG OPERATION:**

All ZIMO decoders are capable of operating on conventional layouts with DC power packs, including PWM throttles, in analog DC as well as in analog AC (Märklin transformers with high voltage pulse for direction change). To allow analog operation CV #29, Bit 2 = 1 must be set. This is usually the case by default (CV #29 = 14, which includes Bit 2 = 1), but analog operation may be turned off in many sound projects (sound decoders). It is recommended to turn analog mode off when operating strictly on DCC! The actual behavior during analog operation, however, is strongly influenced by the locomotive controller (power pack). Especially in combination with a weak transformer, it is easily possible that the track voltage collapses when the decoder (motor) starts to draw power which, in the worst case, may lead to intermittent performance.

The reset function is very convenient, as you can set the original manufacturing values again at any time. You can use this function with DCC and Motorola systems. To use this function, type "8" in CV #8 or "08" in register "08".

**FUNCTION LIST:**

KEY	FUNCTION	CV	VALUE
F0	Light ON/OFF	33, 34	1, 2
F1	Sound ON/OFF	310	1
F2	Horn low short	517	181
F3	Both horns long	520	181
F4	Dimmed front light		
F5	Accelleration/brake time on/off	156	5
F6	Shunting speed on/off	155	6
F7	Curve squealing	308, 604	7, 91
F8	Rail-clank		
F9	Compressor	538	91
F10	Sand	541	32
F11	Coupling sound	544	46
F12	Release brakes	547	91
F13	Let off pressurized air	550	64
F14	Announcement #1	553	181

KEY	FUNCTION	CV	VALUE
F15	Announcement #2	553	181
F16	Announcement #3	559	181
F17	Station master whistle	562	46
F18	Fade out sound (tunnel) / fade in	313	118
F19	Horn high long	568	181
F20	Horn low long	674	181
F21	Volume +	397	21
F22	Volume -	396	22



<https://de.rivarossi.com>

Manufactured by:  
Hornby Hobbies Ltd  
Westwood, Margate, Kent, CT9 4JX, UK

EU Authorised Representative:  
Hornby Italia SRL  
Viale dei Caduti, 52/A6, Castel Mella (BS), Italy, 25030

+49 8921094551  
customerservices.de@hornby.com  
technicalservices.de@hornby.com

+34 938004786  
customerservices.es@hornby.com  
technicalservices.es@hornby.com

+39 0687501292  
customerservices.it@hornby.com  
technicalservices.it@hornby.com

+44 (0)1843 233525  
customerservices.uk@hornby.com  
technicalservices.uk@hornby.com



**Service Sheet HRBD-101u**  
Issued Jun 2021 - Subject to technical modifications



CV	NAME	DESCRIPTION	RANGE	VALUE																																							
1	Short address	Locomotive address.		3																																							
2	Start voltage	Voltage with which the loco's motor starts to run.	1-252	1																																							
3	Acceleration rate	Multiplied by 0.9 equals the time in sec from standstill to full speed.	0-255	23																																							
4	Deceleration rate	Multiplied by 0.9 equals the time in sec from full speed to standstill.	0-255	16																																							
5	Top speed	Internal speed step applied for the highest external speed.	0-255	255																																							
8	Manufacturer's ID	Manufacturer's ID (ZIMO). Set CV8 to value 8 for automatic resetting.		145																																							
13	Analogue mode F1-F8	Status of functions F1 to F8 in analogue mode. <table border="1"> <thead> <tr> <th>Bit</th> <th>Function</th> <th>Value</th> </tr> </thead> <tbody> <tr><td>0</td><td>F1</td><td>1</td></tr> <tr><td>1</td><td>F2</td><td>2</td></tr> <tr><td>2</td><td>F3</td><td>4</td></tr> <tr><td>3</td><td>F4</td><td>8</td></tr> <tr><td>4</td><td>F5</td><td>16</td></tr> <tr><td>5</td><td>F6</td><td>32</td></tr> <tr><td>6</td><td>F7</td><td>64</td></tr> <tr><td>7</td><td>F8</td><td>128</td></tr> </tbody> </table>	Bit	Function	Value	0	F1	1	1	F2	2	2	F3	4	3	F4	8	4	F5	16	5	F6	32	6	F7	64	7	F8	128	0-255	128												
Bit	Function	Value																																									
0	F1	1																																									
1	F2	2																																									
2	F3	4																																									
3	F4	8																																									
4	F5	16																																									
5	F6	32																																									
6	F7	64																																									
7	F8	128																																									
29	Configuration register	The most complex CV within the DCC standards. This register contains important information, which is only relevant in DCC mode. <table border="1"> <thead> <tr> <th>Bit</th> <th>Function</th> <th>Value</th> </tr> </thead> <tbody> <tr><td>0</td><td>Normal direction of travel.</td><td>0</td></tr> <tr><td></td><td>Forward becomes reverse.</td><td>1 Enabled</td></tr> <tr><td>1</td><td>14 speed steps (only in DCC mode).</td><td>0</td></tr> <tr><td></td><td>28 or 128 speed steps (only in DCC mode).</td><td>2 Enabled</td></tr> <tr><td>2</td><td>Analogue mode off.</td><td>0</td></tr> <tr><td></td><td>Analogue mode permitted.</td><td>4 Enabled</td></tr> <tr><td>3</td><td>RailCom® switched off</td><td>0</td></tr> <tr><td></td><td>RailCom® allowed</td><td>8 Enabled</td></tr> <tr><td>4</td><td>Speed curve through CV 2, 5, 6.</td><td>0</td></tr> <tr><td></td><td>Speed curve through CV 67 - 94V.</td><td>16 Enabled</td></tr> <tr><td>5</td><td>Short addresses (CV 1) in DCC-mode.</td><td>0</td></tr> <tr><td></td><td>Long addresses (CV 17+18) in DCC-mode</td><td>32</td></tr> </tbody> </table>	Bit	Function	Value	0	Normal direction of travel.	0		Forward becomes reverse.	1 Enabled	1	14 speed steps (only in DCC mode).	0		28 or 128 speed steps (only in DCC mode).	2 Enabled	2	Analogue mode off.	0		Analogue mode permitted.	4 Enabled	3	RailCom® switched off	0		RailCom® allowed	8 Enabled	4	Speed curve through CV 2, 5, 6.	0		Speed curve through CV 67 - 94V.	16 Enabled	5	Short addresses (CV 1) in DCC-mode.	0		Long addresses (CV 17+18) in DCC-mode	32		14
Bit	Function	Value																																									
0	Normal direction of travel.	0																																									
	Forward becomes reverse.	1 Enabled																																									
1	14 speed steps (only in DCC mode).	0																																									
	28 or 128 speed steps (only in DCC mode).	2 Enabled																																									
2	Analogue mode off.	0																																									
	Analogue mode permitted.	4 Enabled																																									
3	RailCom® switched off	0																																									
	RailCom® allowed	8 Enabled																																									
4	Speed curve through CV 2, 5, 6.	0																																									
	Speed curve through CV 67 - 94V.	16 Enabled																																									
5	Short addresses (CV 1) in DCC-mode.	0																																									
	Long addresses (CV 17+18) in DCC-mode	32																																									
57	Voltage reference	Absolute voltage applied to the motor at full speed (max. throttle setting). 0 = automatic adjustment to track voltage; only useful with stabilized track voltage.	0-255	160																																							
60	Dimming	Rate on function outputs when turned on.	0-255	70																																							
124	Shunting key functions: low gear (half speed) and momentum reduction or deactivation NOTE: Extended shunting key selection in CV's #155, 156	Select a function key for LOW GEAR <table border="1"> <thead> <tr> <th>Bit</th> <th>Function</th> <th>Value</th> </tr> </thead> <tbody> <tr><td>1,0</td><td>No effect on momentum</td><td>0</td></tr> <tr><td></td><td>Removes momentum of CV #121 + #122</td><td>1</td></tr> <tr><td>2</td><td>"MN" key for deactivation (and Bit 6 = 0)</td><td>0</td></tr> <tr><td></td><td>F4 key for deactivation (and Bit 6 = 0)</td><td>2</td></tr> <tr><td>3</td><td>F7 as half-speed key (disabled) (and Bit 4 = 0)</td><td>0</td></tr> <tr><td></td><td>F7 as half-speed key (enabled) (and Bit 4 = 0)</td><td>4</td></tr> <tr><td>4</td><td>F3 as half-speed key (disabled) (and Bit 3 = 0)</td><td>0</td></tr> <tr><td></td><td>F3 as half-speed key (enabled) (and Bit 3 = 0)</td><td>16</td></tr> <tr><td>6</td><td>F3 for activation</td><td>0</td></tr> <tr><td></td><td>F3 for deactivation</td><td>64</td></tr> </tbody> </table>	Bit	Function	Value	1,0	No effect on momentum	0		Removes momentum of CV #121 + #122	1	2	"MN" key for deactivation (and Bit 6 = 0)	0		F4 key for deactivation (and Bit 6 = 0)	2	3	F7 as half-speed key (disabled) (and Bit 4 = 0)	0		F7 as half-speed key (enabled) (and Bit 4 = 0)	4	4	F3 as half-speed key (disabled) (and Bit 3 = 0)	0		F3 as half-speed key (enabled) (and Bit 3 = 0)	16	6	F3 for activation	0		F3 for deactivation	64	Bits 0-4, 6	3						
Bit	Function	Value																																									
1,0	No effect on momentum	0																																									
	Removes momentum of CV #121 + #122	1																																									
2	"MN" key for deactivation (and Bit 6 = 0)	0																																									
	F4 key for deactivation (and Bit 6 = 0)	2																																									
3	F7 as half-speed key (disabled) (and Bit 4 = 0)	0																																									
	F7 as half-speed key (enabled) (and Bit 4 = 0)	4																																									
4	F3 as half-speed key (disabled) (and Bit 3 = 0)	0																																									
	F3 as half-speed key (enabled) (and Bit 3 = 0)	16																																									
6	F3 for activation	0																																									
	F3 for deactivation	64																																									
266	Overall sound volume	The highest volume without distortion is 64; possible up to 100, but rarely above.	0 - 255	64																																							
288	Minimum driving time before brake squeals	The brake squeal is to be suppressed when an engine is driven for a short time only, which is usually a shunting run and often without any cars.	0 - 255	120																																							
395	Maximum volume	Max. volume for key defined with CV# 396, #397	0 - 255	65																																							
396	Volume decrease key			22																																							
397	Volume increase key			21																																							


<https://de.rivarossi.com>

Manufactured by:  
Hornby Hobbies Ltd  
Westwood, Margate, Kent, CT9 4JX, UK

EU Authorised Representative:  
Hornby Italia SRL  
Viale dei Caduti, 52/A6, Castel Mella (BS), Italy, 25030

+49 8921094551  
customerservices.de@hornby.com  
technicalservices.de@hornby.com

+34 938004786  
customerservices.es@hornby.com  
technicalservices.es@hornby.com

+39 0687501292  
customerservices.it@hornby.com  
technicalservices.it@hornby.com

+44 (0)1843 233525  
customerservices.uk@hornby.com  
technicalservices.uk@hornby.com



Service Sheet HRBD-101u  
Issued Jun 2021 - Subject to technical modifications


**EIGENSCHAFTEN:**

- Werkseitig ist die Lok auf die Adresse 03 voreingestellt.
- Der Sound-Decoder ist im NMRA-DCC-Datenformat und auch im Gleichstrom-Analogbetrieb (DC, Modellbahn-Trafos, PWM-und Labornetzgeräte) einsetzbar.
- 14, 28 oder 128 wählbare Geschwindigkeitsstufen in DCC-Systemen.
- Überlastschutz für alle Funktionsausgänge.
- 4 Funktionsausgänge + 6 Logic Level
- Audioverstärker: 1 W, 8 Ohm.
- Das vollständige Handbuch finden Sie unter <http://www.zimo.at/web2010/documents/MS-Sound-Decoder.pdf>.


**EINSTELLUNG DER PARAMETER DES DECODERS:**

Der Sound-Decoder steuert mehrere Parameter (CVs). Eine Liste aller CVs finden Sie unter <http://www.zimo.at/web2010/documents/cvliste.pdf>.

Jede CV kann über die entsprechenden Befehle unabhängig voneinander eingestellt werden. Die in diesem Projekt geänderten CVs finden Sie am Ende dieses Blattes aufgelistet.

**DCC System (ZIMO, Lenz, Intellibox, etc.):**

Es ist sehr einfach, die Parameter einzustellen, wenn Sie ein DCC-kompatibles Digital-System verwenden. Bitte lesen Sie das entsprechende Kapitel in der Betriebsanleitung Ihres Digitalsteuergeräts (Programmieren von DCC-Decodern). Der Sound-Decoder unterstützt jedes Programmiergerät nach NMRA-Norm.

**ANALOGER BETRIEB:**

ZIMO Decoder sind auch für konventionelle Anlagen (mit Modellbahn-Trafos, PWM-Fahrgeräten, usw.) geeignet, sowohl Analog-Gleichstrom als auch Analog-Wechselstrom (Märklin, auch mit Hochspannungspuls zur Richtungsumkehr). Damit der Analogbetrieb möglich ist, muss CV #29, Bit 2= 1 gesetzt sein. Dies ist zwar bereits standardmäßig (CV #29 = 14, also auch Bit 2 = 1) der Fall, aber in Sound-Projekten ist der Analogbetrieb oft abgeschaltet. Das tatsächliche Verhalten im Analogbetrieb ist allerdings stark vom verwendeten Fahrgerät abhängig; besonders bei Verwendung eines zu schwachen Trafos kann die Fahrspannung leicht zusammenbrechen, wenn der Decoder mit dem Stromverbrauch beginnt; was im ungünstigsten Fall zu Oszillieren zwischen Betrieb und Nicht-Betrieb führt.

Die Reset-Funktion ist sehr nützlich, da Sie den Decoder damit jederzeit auf seine Werkseinstellungen zurücksetzen können. Sie können diese Funktion in Motorola- und DCC-Systemen nutzen. Um diese Funktion zu aktivieren setzen Sie den CV 8 auf den Wert „8“.

**FUNKTIONSLISTE:**

KEY	FUNKTION	CV	WERT
F0	Spitzenlicht vorn an/aus	33, 34	1, 2
F1	Sound ein/aus	310	1
F2	Horn tief kurz	517	181
F3	Horn beide lang	520	181
F4	Spitzenlicht aufblenden/abblenden		
F5	Beschleunigung/Bremszeit an/aus	156	5
F6	Rangiergang an/aus	155	6
F7	Kurvenquietschen	308, 604	7, 91
F8	Schienenstöße		
F9	Kompressor	538	91
F10	Sanden	541	32
F11	An-/Abkuppeln (Kupplungsgeräusch)	544	46
F12	Bremsen lösen	547	91
F13	Druckluftzischen	550	64
F14	Ansage Einfahrt	553	181

KEY	FUNKTION	CV	WERT
F15	Ansage	553	181
F16	Ansage Abfahrt	559	181
F17	Schaffnerpfeif	562	46
F18	Sound aus-/einblenden (Tunnel)	313	118
F19	Horn hoch lang	568	181
F20	Horn tief lang	674	181
F21	Lautstärke +	397	21
F22	Lautstärke -	396	22



<https://de.rivarossi.com>



Manufactured by:  
Hornby Hobbies Ltd  
Westwood, Margate, Kent, CT9 4JX, UK

EU Authorised Representative:  
Hornby Italia SRL  
Viale dei Caduti, 52/A6, Castel Mella (BS), Italy, 25030

+49 8921094551  
customerservices.de@hornby.com  
technicalservices.de@hornby.com

+34 938004786  
customerservices.es@hornby.com  
technicalservices.es@hornby.com

+39 0687501292  
customerservices.it@hornby.com  
technicalservices.it@hornby.com

+44 (0)1843 233525  
customerservices.uk@hornby.com  
technicalservices.uk@hornby.com



**Service Sheet HRBD-101u**  
Issued Jun 2021 - Subject to technical modifications



CV	NAME	BESCHREIBUNG	BEREICH	WERT																																	
1	Lokadresse	Adresse der Lok		3																																	
2	Anfahrspannung	Legt die Mindestgeschwindigkeit der Lok fest	1-252	1																																	
3	Beschleunigungszeit	Der Wert entspricht der Zeit in Sekunden vom Stillstand bis zur Höchstgeschwindigkeit	0-255	23																																	
4	Bremszeit	Der Wert entspricht der Zeit in Sekunden von der Höchstgeschwindigkeit bis zum Stillstand	0-255	16																																	
5	Höchstgeschwindigkeit	Die Höchstgeschwindigkeit der Lok	0-255	255																																	
8	Herstellereerkennung	Hersteller-Nummer (ID) der ZIMO - Das Schreiben des Wert 8 bewirkt ein Zurücksetzen aller CV auf die Werkseinstellung		145																																	
13	Analog Modus F1-F8	Zustand der Funktionen F1 bis F8 im Analogmodus <table border="1"> <thead> <tr> <th>Bit</th> <th>Funktion</th> <th>Wert</th> </tr> </thead> <tbody> <tr><td>0</td><td>F1</td><td>1</td></tr> <tr><td>1</td><td>F2</td><td>2</td></tr> <tr><td>2</td><td>F3</td><td>4</td></tr> <tr><td>3</td><td>F4</td><td>8</td></tr> <tr><td>4</td><td>F5</td><td>16</td></tr> <tr><td>5</td><td>F6</td><td>32</td></tr> <tr><td>6</td><td>F7</td><td>64</td></tr> <tr><td>7</td><td>F8</td><td>128</td></tr> </tbody> </table>	Bit	Funktion	Wert	0	F1	1	1	F2	2	2	F3	4	3	F4	8	4	F5	16	5	F6	32	6	F7	64	7	F8	128	0-255	128						
Bit	Funktion	Wert																																			
0	F1	1																																			
1	F2	2																																			
2	F3	4																																			
3	F4	8																																			
4	F5	16																																			
5	F6	32																																			
6	F7	64																																			
7	F8	128																																			
29	Konfigurationsregister	Die komplexeste CV innerhalb der DCC Norm. - In diesem Register werden wichtige Informationen zusammengefasst, die allerdings teilweise nur im DCC-Betrieb relevant sind. <table border="1"> <thead> <tr> <th>Bit</th> <th>Funktion</th> <th>Wert</th> </tr> </thead> <tbody> <tr><td rowspan="2">0</td><td>Normales Fahrtrichtungs</td><td>0</td></tr> <tr><td>Umgekehrtes Richtungsverhalten</td><td>1</td></tr> <tr><td rowspan="2">1</td><td>14 Fahrstufen (nur DCC-Betrieb)</td><td>0</td></tr> <tr><td>28 oder 128 Fahrstufen (nur DCC-Betrieb)</td><td>2</td></tr> <tr><td rowspan="2">2</td><td>Analogbetrieb ausschalten</td><td>0</td></tr> <tr><td>Analogbetrieb erlauben</td><td>4</td></tr> <tr><td rowspan="2">3</td><td>RailCom® ist ausschalten</td><td>0</td></tr> <tr><td>RailCom® erlauben</td><td>8</td></tr> <tr><td rowspan="2">4</td><td>Kennlinie durch CV 2, 5, 6</td><td>0</td></tr> <tr><td>Kennlinie durch CV 67 - 94</td><td>16</td></tr> <tr><td rowspan="2">5</td><td>Kurze Adressen (CV 1) im DCC-Betrieb</td><td>0</td></tr> <tr><td>Longe Adressen (CV 17+18) im DCC-Betrieb</td><td>32</td></tr> </tbody> </table>	Bit	Funktion	Wert	0	Normales Fahrtrichtungs	0	Umgekehrtes Richtungsverhalten	1	1	14 Fahrstufen (nur DCC-Betrieb)	0	28 oder 128 Fahrstufen (nur DCC-Betrieb)	2	2	Analogbetrieb ausschalten	0	Analogbetrieb erlauben	4	3	RailCom® ist ausschalten	0	RailCom® erlauben	8	4	Kennlinie durch CV 2, 5, 6	0	Kennlinie durch CV 67 - 94	16	5	Kurze Adressen (CV 1) im DCC-Betrieb	0	Longe Adressen (CV 17+18) im DCC-Betrieb	32		14
Bit	Funktion	Wert																																			
0	Normales Fahrtrichtungs	0																																			
	Umgekehrtes Richtungsverhalten	1																																			
1	14 Fahrstufen (nur DCC-Betrieb)	0																																			
	28 oder 128 Fahrstufen (nur DCC-Betrieb)	2																																			
2	Analogbetrieb ausschalten	0																																			
	Analogbetrieb erlauben	4																																			
3	RailCom® ist ausschalten	0																																			
	RailCom® erlauben	8																																			
4	Kennlinie durch CV 2, 5, 6	0																																			
	Kennlinie durch CV 67 - 94	16																																			
5	Kurze Adressen (CV 1) im DCC-Betrieb	0																																			
	Longe Adressen (CV 17+18) im DCC-Betrieb	32																																			
57	Regelungsreferenz	Absolute Motoransteuerungsspannung in Zehntel Volt, die bei voller Fahrt am Motor anliegen soll. CV # 57 = 0: in diesem Fall erfolgt automatische Anpassung an die aktuelle Schienenspannung.	0-255	160																																	
60	Dimmen = Spannungsreduktion der Funktionsausgänge	Reduktion der effektiven Spannung durch PWM für alle Funktionsausgänge, soweit diese nicht in Maske.	0-255	70																																	
124	Rangiertastenfunktionen: Beschleunigungsdeaktivierung, „Halbgeschwindigkeit“ bedeutet 0,625 der Vmax (siehe CV # 155 Bit 7 - 5)	Wählen Sie eine Funktionstaste für den Rangiergang <table border="1"> <thead> <tr> <th>Bit</th> <th>Function</th> <th>Value</th> </tr> </thead> <tbody> <tr><td rowspan="2">1,0</td><td>Kein Effekt auf den Schwung/Auslauf</td><td>0</td></tr> <tr><td>Entfernt Schwung/Auslauf von CV #121 + #122</td><td>1</td></tr> <tr><td rowspan="2">2</td><td>„MN“-Taste zur Deaktivierung (und Bit 6 = 0)</td><td>0</td></tr> <tr><td>F4-Taste zur Deaktivierung (und Bit 6 = 0)</td><td>2</td></tr> <tr><td rowspan="2">3</td><td>F7 als Taste zur Halbierung der Geschwindigkeit (deaktiviert) (und Bit 4 = 0)</td><td>0</td></tr> <tr><td>F7 als Taste zur Halbierung der Geschwindigkeit (aktiviert) (und Bit 4 = 0)</td><td>4</td></tr> <tr><td rowspan="2">4</td><td>F3 als Taste zur Halbierung der Geschwindigkeit (deaktiviert) (und Bit 3 = 0)</td><td>0</td></tr> <tr><td>F3 als Taste zur Halbierung der Geschwindigkeit (aktiviert) (und Bit 3 = 0)</td><td>16</td></tr> <tr><td rowspan="2">6</td><td>F3 zur Aktivierung</td><td>0</td></tr> <tr><td>F3 zur Deaktivierung</td><td>64</td></tr> </tbody> </table>	Bit	Function	Value	1,0	Kein Effekt auf den Schwung/Auslauf	0	Entfernt Schwung/Auslauf von CV #121 + #122	1	2	„MN“-Taste zur Deaktivierung (und Bit 6 = 0)	0	F4-Taste zur Deaktivierung (und Bit 6 = 0)	2	3	F7 als Taste zur Halbierung der Geschwindigkeit (deaktiviert) (und Bit 4 = 0)	0	F7 als Taste zur Halbierung der Geschwindigkeit (aktiviert) (und Bit 4 = 0)	4	4	F3 als Taste zur Halbierung der Geschwindigkeit (deaktiviert) (und Bit 3 = 0)	0	F3 als Taste zur Halbierung der Geschwindigkeit (aktiviert) (und Bit 3 = 0)	16	6	F3 zur Aktivierung	0	F3 zur Deaktivierung	64	Bits 0-4, 6	3					
Bit	Function	Value																																			
1,0	Kein Effekt auf den Schwung/Auslauf	0																																			
	Entfernt Schwung/Auslauf von CV #121 + #122	1																																			
2	„MN“-Taste zur Deaktivierung (und Bit 6 = 0)	0																																			
	F4-Taste zur Deaktivierung (und Bit 6 = 0)	2																																			
3	F7 als Taste zur Halbierung der Geschwindigkeit (deaktiviert) (und Bit 4 = 0)	0																																			
	F7 als Taste zur Halbierung der Geschwindigkeit (aktiviert) (und Bit 4 = 0)	4																																			
4	F3 als Taste zur Halbierung der Geschwindigkeit (deaktiviert) (und Bit 3 = 0)	0																																			
	F3 als Taste zur Halbierung der Geschwindigkeit (aktiviert) (und Bit 3 = 0)	16																																			
6	F3 zur Aktivierung	0																																			
	F3 zur Deaktivierung	64																																			
266	Gesamtlautstärke	Der Wert „64“ (default) ergibt (rechnerisch) die lautest mögliche verzerrungsfreie Wiedergabe; jedoch sind Werte bis ca. 100 durchaus zweckmäßig, da die Lautstärke erhöht wird, ohne dass die Verzerrungen bereits stark hörbar wären, darüber hinaus hängt die Brauchbarkeit des Klangs von den verwendeten Sound-Samples ab.	0 - 255	64																																	
288	Bremsenquietschen Mindestfahrzeit	Das Bremsenquietschen soll unterdrückt werden, wenn die Lok nur kurze Zeit gefahren ist, weil dabei handelt es sich meistens nur um Rangierfahrten häufig ohne Wagen.	0 - 255	120																																	
395	Maximale Lautstärke	Max. Lautstärke für Taste lt. CV #396 / 397.	0 - 255	65																																	
396	Taste für leiser			22																																	
397	Taste für lauter			21																																	


<https://de.rivarossi.com>

Manufactured by:  
Hornby Hobbies Ltd  
Westwood, Margate, Kent, CT9 4JX, UK

EU Authorised Representative:  
Hornby Italia SRL  
Viale dei Caduti, 52/A6, Castel Mella (BS), Italy, 25030

+49 8921094551  
customerservices.de@hornby.com  
technicalservices.de@hornby.com

+34 938004786  
customerservices.es@hornby.com  
technicalservices.es@hornby.com

+39 0687501292  
customerservices.it@hornby.com  
technicalservices.it@hornby.com

+44 (0)1843 233525  
customerservices.uk@hornby.com  
technicalservices.uk@hornby.com



Service Sheet HRBD-101u  
Issued Jun 2021 - Subject to technical modifications